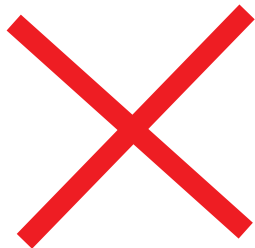


Gear in motion

Mixer bag Front option Guide

The Orca OR-272, OR-30, OR-32, OR-34, OR-330, OR-332 and OR-334 have a replaceable front option with zipper. This feature allows the user the option to change the front pouch of the mixer case according to their needs. You can change the front to a flat front pouch to make the bag low profile or enlarge the front with bigger pouches and side wireless pouches if you desire more room for gear. The list below shows all the optional add-ons and their suitable mixer cases.

	Flat Front Pocket	Front Accessories Pocket	Front Accessories Pocket
FIT: OR-272 OR-30 OR-330	OSP-1030-20 BLACK OSP-1030-21-GRAY OSP-1030-22 BLUE 	OSP-10272-10  includes 2 side wireless pouches	OSP-10330-10  DOES NOT Include 2 side wireless pouches.
FIT: OR-32 OR-332 OR-34	OSP-1032-24 	OSP-1032-23  includes 2 side wireless pouches	OSP-10332-23  DOES NOT Include 2 side wireless pouches.
FIT: OR-334	OSP-10334-24 		OSP-10334-23  DOES NOT Include 2 side wireless pouches.
FIT: OR-272 OR-30 OR-32 OR-34 OR-41 OR-49 OR-330 OR-332 OR-334	OSP-G37 side wireless pouches 		

DISCLAIMER

Please Note That Product Specifications Are Subject To Change Without Notice. And Versions Of Product Shown On This page May Not be Available in All local markets If you can't find them please contact Info@orcabags.com

Demo of use

Flat front comes with a zipper mesh back.



2 external wireless pouches can be mounted on the side of the front pocket.



The back mesh zipper back that comes with the flat front can be used to close the back of the front pouch so it can be used as a standalone pouch.

